Cuisinart

INSTRUCTION BOOKLET



PerfecTemp® 14-Cup Programmable Coffeemaker

DCC-3200

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- 1. READ ALL INSTRUCTIONS.
- Always unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against electric shock, do not place cord, plug, or base unit in water or other liquids.
- This appliance should not be used by or near children or individuals with certain disabilities.
- 6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest Cuisinart Repair Center for examination, repair, and electrical or mechanical adjustment.
- The use of accessory attachments not recommended by Cuisinart may cause injuries.
- 8. Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always fill water reservoir first, then plug cord into the wall outlet. To disconnect, push the Brew/Off button, then remove plug from wall outlet.
- 12. Do not use appliance for other than intended use.
- 13. Snap lid securely onto carafe before serving any beverages.
- 14. Scalding may occur if the lid is removed during the brewing cycle.

- 15. The glass carafe is designed for use with this coffeemaker only. It must never be used on the range top.
- Do not set a hot carafe on a wet or cold surface.
- 17. Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe or heating plate with cleansers, steel wool pads, or other abrasive materials.
- 19. WARNING: TO REDUCE THE
 RISK OF FIRE OR ELECTRIC SHOCK,
 DO NOT REMOVE THE BASE PANEL.
 NO USER-SERVICEABLE PARTS ARE
 INSIDE. REPAIRS SHOULD BE DONE
 ONLY BY AUTHORIZED PERSONNEL.
- Do not place cloth beneath coffeemaker or otherwise restrict airflow.
- 21. Use only the Cuisinart® Gold-Tone Commercial Style Filter or standard basket-style paper filter with this unit. OTHER GOLD-TONE PERMANENT FILTERS MAY CAUSE THE COFFEEMAKER TO OVERFLOW.
- 22. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

WARNING: RISK OF FIRE OR ELECTRIC SHOCK



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated, dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

OPERATING NOTICE

Clogging and backing up of water and/or coffee in the filter basket can occur under any or a combination of any of the following conditions: The use of too finely ground coffee, using two or more paper filters, using the gold-tone filter in conjunction with a paper filter or not properly cleaning coffee grounds from the gold-tone filter, or allowing coffee grounds to spill over the filter.

Caution: Never open the filter basket during the brewing cycle, even if no water is draining from the filter basket, because extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening and checking the filter basket.



CONTENTS

Important Safeguards
Important Unpacking Instructions
The Quest for the Perfect Cup of Coffee 4
Features and Benefits5
Control Panel
Before Brewing Your First Pot
Programming Your Coffeemaker
Making Coffee8
Brew Pause™ Feature8
Cleaning and Maintenance9
Decalcification
Warranty10

IMPORTANT UNPACKING INSTRUCTIONS

- 1. Place the box on a large, sturdy, flat surface.
- 2. Remove literature.
- Turn the box so that the back side of the coffeemaker is down and slide the coffeemaker from the box.
- After the coffeemaker has been removed, place the box out of the way and lift off the left and right inserts.
- Grasp the carafe by its handle, remove it from the heating plate, and remove the polybag.
- 6. Remove the polybag covering the coffeemaker.

Save all packing materials in case you have to ship the machine in the future.

KEEP ALL PLASTIC BAGS AWAY FROM CHILDREN.

THE QUEST FOR THE PERFECT CUP OF COFFEE

Element 1: Water

Coffee is 98% water. The quality of that water is as important as the quality of your coffee. If water doesn't taste good from the tap, it won't taste good in your coffee. Cuisinart includes a charcoal water filter to remove chlorine, bad tastes and odors for the purest coffee flavor, every time you brew.

Element 2: Coffee

While coffee is 98% water, all of the flavor comes from the beans. To achieve the same great taste you enjoy at a coffee bar, you need to use the same quality of coffee. If you choose to grind your own beans, buy them fresh and whole. Buy only about a two-week supply at a time, because once the bean is broken, its flavor degrades quickly.

Element 3: Grind

The grind is critical for proper flavor extraction. If the grind is too fine, over-extraction and bitterness will result. Too fine a grind may also clog the filter. If grind is too coarse, the water will pass through too quickly and the maximum flavor will not be extracted. When grinding your own beans, we recommend a medium-fine grind.

Element 4: Proportion

Coffee that is too strong or too weak is always a disappointment. Follow the recommended portions of ground coffee in the instructions under MAKING COFFEE, and later adjust the amount to suit your taste.

FEATURES AND BENEFITS

1. Coffeemaker Lid

Opens to access filter basket, water filter and water reservoir.

2. Water Reservoir with Water Level Indicator Window

3. Showerhead (not shown)

Distributes water evenly over coffee, reducing temperature loss as water passes through grounds.

4. Charcoal Water Filter Holder

Holds water filter firmly in place.

5. Charcoal Water Filter

Eliminates chlorine, bad tastes and odors from tap water.

6. Filter Basket


Holds a #4 paper filter **OR** a gold-tone filter.

7. Filter Basket Holder

8. Cuisinart® Permanent Gold-Tone Commercial-Style Filter

Eliminates the need for paper filters. **NOTE:** Some fine grounds may flow through the filter and appear as sediment in the carafe.



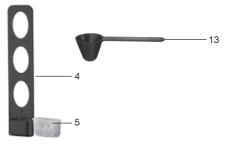

9. Control Panel

See detailed illustration, page 6.

10. Brew Pause™

Stops flow of coffee from basket when carafe is removed (20 seconds max) from the heater plate, so a cup can be poured mid-brew.

11. 14-Cup Glass Carafe

The easy-pour carafe has an ergonomic handle and brewed coffee markings for 4 to 14 cups.

12. 60-Second Reset (not shown)

One-minute protection in case a breaker trips, the unit is unplugged, or the power fails. It holds all programmed information, including time of day, Auto On time and Auto Off time.

13. Measuring Scoop

14. BPA Free (not shown)

All parts that come in contact with coffee or liquids are BPA free.



GETTING TO KNOW YOUR CONTROL PANEL

Detailed programming and use instructions are on pages 7 and 8.



1. Ready Tone Button

Lets you turn an audible "Brew Cycle Finished" alert on or off.

2. Blue Backlit Display

Displays time of day, Auto On and Auto Off times.

- A. Low, Medium and High (L,M,H) warming plate indicators.
- B. Ready Tone off icon appears when Ready Tone is off.

3. Hour and Minute Buttons

Use to set hours and minutes for time of day, Auto On and Auto Off times.

4. Carafe Temperature Button

Adjusts warming plate temperature to Low, Medium or High to keep freshly brewed coffee at the temperature you prefer.

5. Clean Button

Red indicator appears when it is time to decalcify your coffeemaker.

6. Bold Flavor Strength Button

Lets you choose bold or regular coffee flavor; blue indicator appears when bold is selected.

7. Brew/Off & Auto Off Button

Turns coffeemaker on and off. Use the Auto Off feature to program the time you want the coffeemaker to shut off – from 0 to 4 hours after brew cycle is finished.

8. Prog/Auto On Button

Lets you program coffeemaker to automatically begin brewing up to 24 hours in advance.

9. 1-4 Cup Button

Adjusts brew process to maximize coffee flavor when brewing fewer than 5 cups. Blue indicator appears when function is selected.

BEFORE BREWING YOUR FIRST POT OF COFFEE

Rinsing your coffeemaker: During the manufacturing process, dust can get trapped in the unit. We recommend flushing out the system before brewing your first pot of coffee. Simply fill the reservoir, power on the unit, and follow steps 1, 3 and 5 on page 8 under MAKING COFFEE. Do not add coffee!

Charcoal Water Filter

Your coffeemaker comes with a charcoal water filter that eliminates chlorine, bad tastes and odors from tap water.

Inserting the Water Filter

- Remove the filter from polybag and soak it, fully immersed, in cold tap water for 15 minutes.
- Lift the water filter holder out of the water reservoir.
- Press down on the filter compartment and pull toward you to open.
- Place filter into the holder and snap it closed. Be careful – improper placement can tear the filter skin.
- Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds.
- Allow the filter to drain completely.
- Slide the water filter holder back into the channel in the water reservoir, pushing it down to the base of the unit.

NOTE: We recommend changing the water filter every 60 days or after 60 uses, and more often if you have hard water.

Replacement filters can be purchased in stores, by calling Cuisinart Customer Service, or at www.cuisinart.com



SETTING THE CLOCK

When the coffeemaker is plugged in, 12:00 will flash in the display for 10 seconds, indicating the unit is in Clock Set mode. If 12:00 stops flashing, simply press and hold Hour or Minute button to return to flashing Clock Set mode.

Setting Hours and Minutes

Press either button to select the desired time. Hold buttons down to scroll through the digits quickly, or press and release to advance one digit at a time. Be sure the PM indicator is on if setting a PM time.

SETTING THE AUTO ON TIME

1. Press and hold the Prog/Auto On button for 2 seconds.

The digital display will flash the default (12:00) or previously selected time. Follow directions under SETTING THE CLOCK (above) to program your startbrew time. Five seconds after finishing, the unit will automatically exit Auto On Setup mode and the indicator light will illuminate, letting you know Auto On is activated.

NOTE: To exit Auto On Setup mode, you can also just press Auto On button again.

2. To activate Auto On using previously selected time:

Press the Prog/Auto On button. Previously set time will appear and indicator will light up. Display will return to clock setting.

3. To deactivate Auto On:

Press illuminated Auto On button; light will go off, indicating mode is turned off.

SETTING THE AUTO OFF TIME

1. Press and hold the Auto Off button for 2 seconds.

The digital display will flash the programmed Auto Off default (2:00) or previously selected time. Follow directions under SETTING THE CLOCK to program coffeemaker to shut off from 0 to 4 hours after brew cycle is finished.

2. To exit/confirm Auto Off time setting:
Do not touch any buttons. Auto Off
Setup mode will be exited automatically
after 5 seconds.

TURNING OFF READY TONE


Your coffeemaker features a Ready Tone that beeps 5 times when coffee is finished brewing. To turn this alert off, press Tone button; an icon will appear in display to indicate tone is off. To turn tone back on, press Tone button again; icon will disappear.

MAKING COFFEE

Follow instructions in BEFORE BREWING YOUR FIRST POT OF COFFEE (page 7).

1. Fill the water reservoir

Lift the coffeemaker lid to open. Pour the desired amount of water into the water reservoir using the water level indicator located at the side of the coffeemaker.

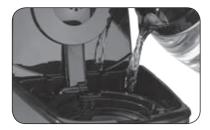

2. Add the ground coffee

Insert a #4 paper filter **OR** the gold-tone filter. Be sure that the paper filter is completely open and fully inserted in the basket. It may help to fold and flatten the seams of a paper filter beforehand. Add 1 level scoop of ground coffee per cup. Adjust the amount according to taste.



NOTE: The maximum capacity for ground coffee is 15 tablespoons for this coffeemaker. Exceeding this amount may cause overflow if the coffee is too finely ground.

3. Position carafe and plug in unit

Place carafe on heating plate and be sure coffeemaker lid is closed. Plug coffeemaker into an electrical outlet.

4. Set preferences

- a. Press the 1–4 cup button if you are brewing fewer than 5 cups. The indicator light will illuminate.
- Press the Bold button to select stronger coffee flavor, if desired. The button's indicator light will illuminate. Press again to turn off light and brew at regular strength.
- c. Choose Low (L), Medium (M) or High (H) carafe temperature by pressing Carafe Temp button. Selection will appear in display.

5. Start Brewing

Press the Brew/Off button to begin brewing.

6. After brewing

When the brewing cycle has been completed, five beeps will sound. Coffee will continue to stream from the filter for several seconds.

Note: Reservoir cover may be hot during and directly after brewing. Wait at least 10 minutes before opening.

Brew Pause[™] Feature

This feature interrupts the flow of coffee from the basket to let you pour that first cup mid-brew. Because the flavor profile of coffee brewed at the start of a cycle differs from that brewed toward the end, be aware that using this feature will weaken the flavor strength of the finished pot.

NOTE: Removing carafe for more than 20 seconds during brew cycle may cause filter basket to overflow.

CLEANING AND MAINTENANCE

Always turn coffeemaker off and remove the plug from the electrical outlet before cleaning.

Lift up the coffeemaker lid. Remove and discard the paper filter and ground coffee. The filter basket can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after use.

Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.

Remove the carafe from the heating plate. Discard any remaining coffee. The carafe and lid can be washed in warm, soapy water and rinsed thoroughly, or placed in a dishwasher. The carafe and carafe lid should be placed on the upper rack only.

Do not use any scouring agents or harsh cleansers on any part of the coffeemaker.

Never immerse base unit in water or other liquids. To clean base, simply wipe with a clean, damp cloth and dry before storing. Fingerprints and other blemishes on the housing can be washed off with soap and water or a nonabrasive cleaning solution. Wipe heating plate with a clean, damp cloth. Never use rough, abrasive materials or cleansers to clean the heating plate. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

Maintenance

Any other servicing should be performed by an authorized service representative.

DECALCIFICATION

Decalcification refers to the removal of calcium deposits that form over time on the metal parts of your coffeemaker. The mineral content of the tap water in your area and the frequency of use affects the rate of the calcium buildup, which can affect the functioning of your coffeemaker and the flavor of your coffee.

For best performance from your PerfecTemp® coffeemaker, we recommend cleaning it whenever the CLEAN LED indicator lights up.

NOTE: Before decalcifying your unit, remove the charcoal water filter from the water reservoir

To clean:

- 1. Fill the water reservoir to capacity with a mixture of ½ white vinegar and ½ water.
- Press and hold the CLEAN button. When the CLEAN LED indicator flashes, the coffeemaker is in Clean mode. Release the button.
- When the cycle is completed, 5 beeps will sound and the coffeemaker will shut off.
- If the CLEAN indicator illuminates once more, repeat the cleaning procedure with a fresh solution of vinegar and water.
 NOTE: One cleaning cycle is usually sufficient.
- When the CLEAN indicator remains off, run one cycle with a full reservoir of fresh, cold water to rinse the unit.
- Return the charcoal water filter to the holder inside the water reservoir and your coffeemaker is ready to brew!

WARRANTY

Limited Three-Year Warranty

This warranty is available to U.S. consumers only. You are a consumer if you own a Cuisinart® PerfecTemp® 14-Cup Programmable Coffeemaker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® PerfecTemp® 14-Cup Programmable Coffeemaker will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, **www.cuisinart.com** for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair. replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference. return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 800-726-0190. Cuisinart will be responsible for the cost of the repair. replacement, and shipping and handling for such nonconforming products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If your Cuisinart® PerfecTemp® 14-Cup Programmable Coffeemaker should prove to be defective within the warranty period, we will repair or, if we think necessary, replace it. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190 or write to: Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307, To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product, along with proof of purchase. (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions.) Be sure to include your return address, phone numbers, description of the product's defect, product serial number, and any other information pertinent to the return. Please pay by check or money order. NOTE: For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Your Cuisinart® PerfecTemp® 14-Cup Programmable Coffeemaker has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.

NOTES:			

©2014 Cuisinart 150 Milford Road East Windsor, NJ 08520 Printed in China 14CE002770

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.





©2014 Cuisinart 150 Milford Road East Windsor, NJ 08520 Impreso en China 14CE002770 Todas marcas registradas o marcas de comercio mencionadas en ésta pertenecen a sus titulares respectivos.

	<u> </u>
<u> </u>	
·	
	10171011
	:SATON

ANTES DE HACER REPARAR SU APARATO

garantía excluye expresamente los daños piezas de repuesto autorizados solamente. Esta sobre corriente de 120V, usando accesorios y de fabricación y ha sido diseñado para uso Este aparato satisface las más altas exigencias bajo esta garantía. lastimados durante el envío no serán cubiertos equivocada. Los productos perdidos y/o paquetes mandados a una dirección ocurridos durante el transporte o por los Cuisinart no será responsable por los daños método de entrega con seguro y seguimiento. aconsejamos que mande su paquete por un formas de pago. NOTA: para más seguridad, le pertinente. Sentimos no poder aceptar otras problema, así como cualquier información nombre, dirección y teléfono, la descripción del instrucciones de envío. Recuerde incluir su llamar al 1-800-726-0190 para recibir necesitan dar una prueba de compra y deben manejo y envío. Los residentes de California sólo cheque o giro postal de US\$10.00 por gastos de defectuoso, junto con su recibo de compra y un Glendale, AZ 85307. Regrese el aparato a: Cuisinart, 7475 North Glen Harbor Blvd. 1-800-726-0190 o regrese el aparato defectuoso garantía, llame a nuestra línea directa gratuita al nuestra opción). Para obtener servicio bajo esta garantía, la reparemos o reemplazaremos (a materiales o fabricación durante el período de Si este aparato presentara algún defecto de

puede tener otros derechos que varian de un mencionadas pueden no regir para usted. Usted consecuentes, de modo que las limitaciones exclusión o limitación de daños incidentales o consecuentes. Algunos Estados no permiten la expresamente todos los daños incidentales o negligencia o accidente. Esta garantía excluye válida en caso de daños causados por mal uso, institucional o comercial del producto, y no es voltaje. Esta garantía no cubre el uso causados por el uso de un convertidor de no autorizados por Cuisinart, así como los daños causados por accesorios, piezas o reparaciones

producto esté bajo garantía. correctas para repararlo y asegurarse de que el problema correctamente, usar las piezas al 1-800-726-0190 a fin de diagnosticar el deberían llamar al servicio posventa de Cuisinart informe al personal del centro de servicio que a un centro de servicio no autorizado, por favor Importante: si debe llevar el aparato defectuoso

AITNARAD

Garantía limitada de tres años

uso doméstico y según las instrucciones. siempre que el aparato haya sido utilizado para años después de la fecha de compra original, defecto de materiales o fabricación durante 3 Cuisinart garantiza este aparato contra todo no es para los detallistas u otros comerciantes. estados donde la ley lo permita, esta garantía para uso personal o casero. A excepción de los comprado su aparato Cuisinart® en una tienda, solamente. Usted es un consumidor si ha Esta garantía es para los consumidores

fecha de fabricación. período de garantía será calculado a partir de la garantía. En ausencia del recibo de compra, el es necesario para recibir servicio bajo esta original. Sin embargo, registrar el producto no de facilitar la verificación de la fecha de compra registro disponible en www.cuisinart.com a fin Le aconsejamos que llene el formulario de

RESIDENTES DE CALIFORNIA SOLAMENTE

garantía. productos defectuosos durante el período de de reparación, reemplazo, manejo y envío de los 0190. Cuisinart será responsable por los gastos a nuestro servicio posventa al 800-800-726reparen o lo cambien. Para esto, se debe llamar defectuoso directamente a Cuisinart para que lo pueden, si lo desean, mandar el aparato garantía. Los residentes de California también productos defectuosos durante el período de reparación, reemplazo o reembolso de los responsable por los gastos de servicio, aparato de manera económica. Cuisinart será siempre que se pueda ajustar o reparar el aparato a un centro de servicio independiente, satisfacen al consumidor, podrá llevar el producto se dañó. Si estas dos opciones no del producto por el consumidor hasta que el producto, menos la cantidad imputable al uso reembolsará al consumidor el precio original del independiente, cambiará el producto o referirá al consumidor a un centro de servicio tienda, a su opción, reparará el producto, venda productos Cuisinart® de este tipo. La donde lo compraron o (B) a otra tienda que regresar el producto defectuoso a la tienda residentes del estado de California pueden (A) opciones bajo el período de garantía. Los La ley del estado de California ofrece dos

Estado a otro.

NOTA: retire el filtro de carbón antes de eliminar el sarro.

Para limpiar:

- Llene el depósito de agua hasta la capacidad máxima con 1/3 de vinagre blanco y 1/3 de agua.
- Mantenga oprimido el botón CLEAN.
 Cuando el indicador luminoso al lado del botón CLEAN empiece a parpadear, suelte el botón.
- 3. Al final del ciclo de limpieza (indicado por cinco pitidos), la cafetera se apagará.
- Si el indicador luminoso sigue encendido, haga un segundo ciclo de limpieza con una nueva solución de agua con vinagre.
 NOTA: por lo general, un ciclo es suficiente para eliminar el sarro.
- Si el indicador luminosos está apagado, repita estos pasos con un tanque de agua fresca para eliminar el olor a vinagre.
- 7. Vuelva a instalar el filtro de carbón. ¡Su cafetera está lista!

LIMPIEZA Y MANTENIMIENTO

Siempre apague y desconecte el aparato antes de limpiarlo.

Abra la tapa de la cafetera. Retire y tire el filtro de papel. El portafiltros puede lavarse a mano, con detergente y agua tibia, o en la bandeja superior del lavavajillas. Permita que todas las piezas sequen.

No ponga agua en la unidad después de retirar el portafiltros. Limpie el área bajo el portafiltros con un paño húmedo.

Retire la jarra de la placa calentadora. Tire el café remanente. Lave la jarra y la tapa de la jarra a mano, con agua tibia y detergente, o en la bandeja superior del lavavajillas.

No utilice productos o materiales abrasivos para limpiar el aparato.

No sumerja el aparato en agua u otro líquido. Limpie el cuerpo del aparato con un paño húmedo y séquelo antes de guardar el aparato. Las huellas de dedos y otras manchas podrán eliminarse con agua y detergente, o con una solución limpiadora no abrasiva. Limpie la placa calentadora con un asño húmedo. Nunca utilice materiales paño húmedo. Nunca utilice materiales placa. No seque el interior del depósito de la placa. No seque el interior del depósito de agua con un paño, porque pelusas pueden agua con un paño, porque pelusas pueden quedarse adentro del mismo.

Mantenimiento

Cualquier otro servicio debe ser realizado por un técnico autorizado.

ELIMINACIÓN DEL SARRO

Con el tiempo, depósitos de calcio (sarro) se acumulan en las partes metálicas de la cafetera, lo que puede afectar el desempeño de la cafetera y el sabor del caté. Nota: el nivel de acumulación depende del contenido en mineral del agua de la llave y de la trecuencia de uso de la cafetera.

Para un rendimiento óptimo, le aconsejamos eliminar el sarro cada vez que el indicador luminoso del botón CLEAN se enciende.



debidamente instalado. Puede resultar útil doblar y aplanar las costuras del filtro de papel de antemano. Agregue 1 cucharada de café molido por taza. Ajuste la cantidad de café al gusto.

MOTA: esta cafetera tiene una capacidad máxima de 15 cucharadas de café molido. No exceda esta cantidad; esto podría provocar un derrame, especialmente si el café ha sido molido muy fino.

3. Coloque la jarra sobre la placa y asegúrese Coloque la jarra sobre la placa y asegúrese

occodere la tapa está cerrada. Enchufe el cade la tapa está cerrada. Enchufe el cade la tapa está cerrada.

4. Fije sus preferencias

a. Si desea preparar menos de 5 fazas de café, oprima el botón "1-4". El indicador luminoso se encenderá.

 Doprima el botón BOLD si desea caté fuerte. El indicador luminoso se encenderá.
 Presione el botón otra vez para preparar caté regular.

C. Elija la temperatura de la placa, L (baja),
 M (media) o H (alta), presionando el botón
 CARAFE TEMP. Su selección aparecerá en la pantalla.

Función de pausa al servir Brew Pause"

La función Brew Pause^{na} (pausa al servir) permite retirsu la jarra de la placa santes del fin del ciclo de preparación. Aunque ofrecemos esta opción, le recomendamos que espere hasta el final de la preparación para servir el café, porque el sabor del café cambia durante el ciclo.

NOTA: la función Brew Pause[™] detiene el flujo de café durante solamente 20 segundos; no deje la jarra fuera de la placa durante más tiempo.

CÓMO FLIAR EL TIEMPO DE APAGADO AUTOMÁTICO

1. Mantenga oprimido el botón AUTO OFF durante 2 segundos.

El tiempo por defecto (2:00) o el tiempo de apagado automático previamente fijad aparecerá en la pantalla. Utilice los botones "HR" y "MIN" para programar otro teimpo de apagado automático, desde 0 hasta 4 horas después del tinal del ciclo de preparación.

2. Para salir del modo de programación y confirmar el tiempo de apagado automático:

no toque ningún botón, la cafetera saldrá del modo de programación automáticamente después de 5 segundos.

CÓMO DESACTIVAR LA SEÑAL DE LISTO

Su cafetera cuenta con una señal sonora due emite 5 pitidos al final de la preparación. Para desactivar esta función, presione el botón TONE; un icono aparecerá en la pantalla para indicar que la función ha sido desactivada. Para volver a activar la señal, presione el botón TONE; el icono desaparecerá.

OPERACIÓN

Limpie la cafetera antes de usarla por primera vez, según se indicó en la sección ANTES DEL PRIMER USO.

1. Llene el depósito de agua Alce la tapa para abrir. Agregue agua hasta el nivel deseado.



2. Agregue café molido

Instale un filtro de papel No. 4 **O** el filtro de papel No. 4 Se filtro de paperamente abierto y que el filtro esté completamente abierto y

CÓMO FIJAR LA HORA PROGRAMACIÓN

modo de fijación de la hora. oprimido el botón HR o MIN para regresar al cafetera. Si deja de parpadear, mantenga pantalla, parpadeando, al enchufar la 12:00 (la hora por defecto) aparecerá en la

fijar una hora de tarde/noche. el indicador PM está en la pantalla si desea de una hora o de un minuto. Cerciórese que repetidamente para avanzar en incrementos más rápidamente u oprima el botón desplazarse por las horas o los minutos Mantenga oprimido el botón para botón "MIN" para fijar los minutos. Oprima el botón "HR" para fijar la hora y el

ENCENDIDO AUTOMÁTICO COMO FIJAR LA HORA DE

AUTO ON durante 2 segundos. 1. Mantenga oprimido el botón PROG/

automático ha sido activado. iluminará para indicar que el encendido programación y el indicador luminoso se automáticamente del modo de programación, la unidad saldrá segundos después de terminar la hora de encendido automático. Cinco botones "HR" y "MIN" para programar la aparecerá en la pantalla Utilice los encendido automático previamente fijada La hora por defecto (12:00) o la hora de

.NO OTUA en cualquier momento, presione el botón NOTA: para salir del modo de programación

tiempo previamente fijado aparecerá en Oprima el botón PROG/AUTO ON. El 2. Para activar el encendido automático:

iluminará. Luego, la hora aparecerá en la la pantalla y el indicador luminoso se

3. Para desactivar el encendido

modo ha sido desactivado. luz se apagará, lo que indica que el Presione el botón AUTO ON iluminado; la automático:

ANTES DEL PRIMER USO

sección OPERACION en la página 8, pero unidad, siguiendo los pasos 1, 3 y 5 de la Simplemente llene el depósito y encienda la antes de preparar café por primera vez. que limpie el sistema interno de la cafetera proceso de fabricación. Le recomendamos scumularse polvo en el aparato durante el Limpieza inicial del sistema interno: Puede

omitiendo el café.

Filtro de carbón

sabor del agua corriente. carbón que elimina el cloro y el mal olor/ Su cafetera está equipada con un filtro de

Instalación del filtro


- Alce el soporte del filtro que se encuentra remójelo en agua fría durante 15 minutos. Retire el filtro de la bolsa de plástico y
- en el depósito de agua de la cafetera.
- Abra el soporte.
- la membrana del filtro podría romperse. Si no instalara el filtro de manera correcta, Haga esto con mucho con cuidado. Instale el filtro en el soporte y ciérrelo.
- Enjuague el filtro en agua fría durante 10
- Permita que el filtro seque bajo el flujo de agua. las aberturas directamente segundos para limpiarlo,
- completamente.
- hasta el fondo. en el depósito, empujándolo Regrese el soporte del filtro
- si el agua es dura. o más frecuentemente cada 60 días o 60 usos, que cambie el filtro de agua NOTA: le aconsejamos

servicio postventa al com, o llamando a nuestro sitio Web www.cuisinart. especializadas, en nuestro en las tiendas Los filtros están disponibles

1-800-726-0190.

PANEL DE CONTROL

Véase las instrucciones detalladas de programación en las páginas siguientes.

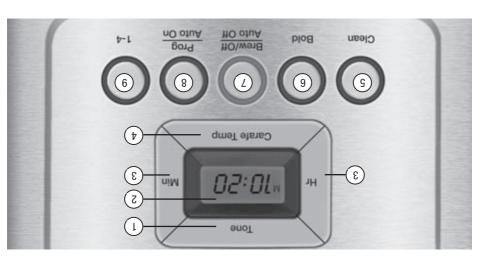

6. Selector de fuerza

Permite elegir la intensidad del caté: regular o fuerte (BOLD). El indicador luminoso aparece cuando "fuerte" ha sido seleccionado.

7. Botón de encendido/apagado y de programación del encendido

automático
Permite encender y apagar el aparato.
Utilice los botones "HR" y "MIN" para
programar otra hora de apagado
automático, desde 0 hasta 4 horas
después del final del ciclo de
preparación.

8. Botón de programación del encendido automático

automático
Permite programar el encendido
automático, hasta con 24 horas de
antelación.

Botón 1–4 (preparación 1–4 tazas) Detimiza el sabor y la temperatura d

Optimiza el sabor y la temperatura del café cuando se prepara menos de 5 tazas. El indicador luminoso verde se enciende cuando la función está activada.

1. Botón para activar/desactivar la señal de listo

Permite activar/desactivar la señal que indica que el café está listo.

2. Pantalla digital con retroiluminación azul

Indica la hora del dia y la hora de encendido/apagado automático.

A. Indicadores de temperatura de la placa calentadora: L (bajo), M (medio), H (alto)

B. Indicador de la señal de listo (aparece cuando la señal ha sido desactivada)

3. Botones de las horas (HR) y de los minutos (MIN)

minutos (MIN)
Permiten fijar la hora y la hora de encendido/apagado automático.

4. Control de temperatura de la placa calentadora

Permite ajustar la temperatura de la placa al nivel deseado: L (bajo), M (medio) o H (alto).

5. Botón de limpieza

El indicador rojo indica cuando es tiempo de eliminar los depósitos de sarro del sistema interno.

9. Panel de control

Detalles en la página 6.

10. Función de pausa al servir Brew Pauseⁿⁿ
Detiene el flujo de café al retirar la jarra de la placa, lo que permite servir una taza de café antes del final de la preparación.

11. Jarra de vidrio de 14 tazas

Jarra de 14 tazas, con cómoda asa ergonómica, pico anti-goteo y marcas de dos a catorce tazas.

12. Sistema de protección contra falla eléctrica (no ilustrado)

Provee una protección de un minuto en caso de interrupción del suministro eléctrico, guardando la información programada, incluso la hora del día y la hora de encendido/apagado automático.

13. Cuchara de medir

14. Sin BPA (no ilustrado)
Minguna de las piezas en contacto con el café/líquido contiene bisfenol A (BPA).



PIEZAS Y CARACTERÍSTICAS

1. Tapa

Acceso fácil al portafiltros, al filtro de agua y al depósito de agua

y al depósito de agua.

2. Depósito de agua con indicador del nivel de agua

 Rociador de agua (no ilustrado)
 Distribuye el agua uniformemente sobre el café, reduciendo la pérdida de temperatura

4. Soporte del filtro de carbón

Sujeta firmemente el filtro.

5. Filtro de carbón

durante la infusión.

Elimina el cloro, el mal olor y sabor del agua corriente.


6. Portafiltros

Para filtro de papel No. 4 O filtro permanente.

7. Compartimiento del portafiltros

8. Filtro dorado permanente Cuisinart®

Reemplaza los filtros de papel. NOTA: el filtro permanente puede dejar pasar posos finos de café.

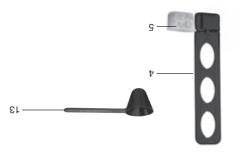



DE UN BUEN CAFÉ PREPARACIÓN PREPARACIÓN

Elemento 1: el agua

El café está constituido por un 98% de agua. Por lo tanto, la calidad del agua es tan importante como la del café. Si el agua tiene mal sabor, el café tendrá mal sabor. Por eso Cuisinart equipó su cafetera con un filtro de carbón que remueve el cloro y el mal sabor y olor, remueve el cloro y el mal sabor y olor,

Elemento 2: el café

Aunque la mayor parte del brebaje es agua, el sabor proviene del café. Para preparar un brebaje de calidad, debe usar ingredientes de calidad. Elija café fresco, en granos enteros. Compre café aproximadamente dos veces por mes. Una vez que se rompen los granos, el sabor intenso y rico del café comienza a deteriorarse.

Elemento 3: el grado de la molienda

La mollenda es primordial para preservar el sabor del café. Café molido muy fino producirá un café amargo. Esto también puede trabar el filtro. Café molido muy grueso dejará pasar el agua demasiado rápidamente, lo cual producirá un café acuoso. Le aconsejamos que utilice un grado de molienda medio-fino.

Elemento 4: las proporciones

Para que el café sea perfecto, ni muy débil ni muy fuerte, se debe usar la proporción apropiada de café y agua. Siga las pautas en la sección PREPARACIÓN y ajuste las proporciones al gusto.

INDICE

Ofsidnanfia
Eliminación del sarro
6 oʻrnəiminətnam γ szəiqmi
8 Brew Pause ""-8
8nòiɔsradO
7 nòiɔsmasion٩
7 del primer uso
9 de control
Piezas y características 5
4
Sugerencias para la preparación de un buen
mportantes instrucciones de desembalaje 4
E-S səfinshoqmi babindəs əb sabibəM

DESEMBALAJE DESEMBALAJE

- DESEMBALAJE

 1. Ponga la caja sobre una superficie
 espaciosa, plana y segura.
- 2. Retire el manual de instrucciones y otros folletos de la caja.
- 3. Voltee la caja para que repose en su lado y retire la cafetera.
- 4. Aleje la caja y alce las dos piezas de cartón.
- 5. Agarre la jarra por el asa, y retirela de la placa y de la bolsa protectora.
- 6. Retire la bolsa protectora que envuelve la cafetera.
- Le aconsejamos que guarde el material de embalaje.
- MANTENGA LAS BOLSAS DE PLÁSTICO FUERA DEL ALCANCE DE LOS NIÑOS.

OSIVA


El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente, inviértela. Si aún no entrara completamente, comuníquese con un electricista. No intente modificarla.

IMPORTANTE

Ciertas condiciones pueden producir un atascamiento del agua y/o del café en el portafiltros y provocar un derrame. Para evitar que esto ocurra, no muela el café demasiado fino, no utilice más de un filtro de papel, o un filtro permanente al mismo permanente sucio, y no sobrellene el filtro. Precaución: Nunca abra la tapa durante la Precaución: Nunca abra la tapa durante la

Precaución: Nunca abra la tapa durante la preparación, aunque líquido no esté bajando. Agua o café muy caliente podría salir del pico y causar quemaduras. Si el café no escurriera debidamente durante la preparación, desenchufe el aparato y espere 10 minutos antes de abrir la tapa y examinar el portafiltros.

ADVERTENCIA: RIESGO ELECTROCUCIÓN

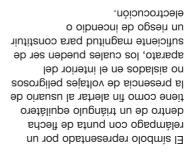



El signo de exclamación dentro de un triángulo equilátero tiene como fin alertar al usuario de la presencia de instrucciones importantes de operación y mantenimiento (servicio) en la documentación que acompaña al equipo.

N20 DE EXTENSIONES

El cable provisto con este aparato es corto para reducir el peligro de que alguien se enganche o tropiece con un cable más largo.

Puede usarse una extensión eléctrica con cuidado.

La clasificación nominal de la extensión debe ser por lo menos igual a la del aparato. Es importante colocar la extensión sobre la encimera o la mesa de tal forma que niños no puedan jalarla o tropezar con ella.



- 15. La jarra proveida con esta cafetera ha sido diseñada para ser usada con ésta únicamente; no la ponga sobre una hornilla caliente.
- No ponga la jarra caliente sobre una superficie húmeda o fría.
- 77. No utilice la jarra si estuviese rajada o si el asa estuviese floja.
- 18. No limpie la jarra o la placa calentadora con limpiadores abrasivos, lana de acero u otros materiales abrasivos.
- HIERO DE INCENDIO O BIERO DE INCENDIO O
- RIESGO DE INCENDIO O
 ELECTROCUCIÓN, NO DESARME EL
 CUERPO DEL APARATO. ESTE
 PUEDAN SER REPARADAS POR EL
 USUARIO. LAS REPARACIONES DEBEN
 SER REALIZADAS POR UN TÉCNICO
 AUTORIZADO.
- 20. No coloque la cafetera encima de un paño/ trapo ni obstruya el flujo de aire debajo de
- 21. Solamente use un filtro dorado permanente Cuisinart[®] o filtros de papel estándares con este aparato. OTROS FILTROS PERMANENTES PODRÍAN PROVOCAR
- РЕЯМАИЕИТЕS PODRÍAN PROVOCAR UN DERRAME.
- 22. No haga funcionar el aparato bajo o adentro de un armario. Siempre desconecte el aparato antes de guardarlo en un armario. Dejar el aparato conectado presenta un riesgo de incendio, especialmente si éste toca las paredes o la puerta del armario cuando cierra.

GUARDE ESTAS INSTRUCCIONES

PARA USO DOMÉSTICO SOLAMENTE

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, debe tomar precauciones básicas de seguridad para reducir el riesgo de incendio, electrocución o heridas, incluso las siguientes:

1. LEA TODAS LAS INSTRUCCIONES.

- 2. Siempre desconecte el aparato cuando no esté en uso y antes de limpiarlo. Permita que se entríe antes de instalar o remover piezas y antes de limpiarlo.
- No toque las superficies calientes. Utilice el mango y los botones o perillas.
- 4. Para reducir el riesgo de electrocución, no sumerja el cable, la clavija o el cuerpo del aparato en agua u otro líquido.
- Este aparato no debería ser usado por o cerca de niños o personas con alguna discapacidad.
- 6. No utilice este aparato si el cable o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.
- 7. El uso de accesorios no recomendados o vendidos por Cuisinart para uso con este modelo puede provocar heridas.
- 8. No lo utilice en exteriores.
- No permita que el cable cuelgue del borde de la encimera o de la mesa, ni que haga contacto con superficies calientes.
- 10. No coloque el aparato sobre o cerca de un quemador a gas o una hornilla eléctrica caliente, ni en un horno caliente.
- 11. Siempre llene el depósito de agua antes de conectar el aparato a la toma de corriente. Siempre apague el aparato, presionando el botón BREW/OFF, antes de desconectarlo.
- 12. No utilice el aparato para ningún otro fin que no sea el indicado.
- 13. Asegúrese de que la tapa de la jarra esté debidamente cerrada antes de servir café.
- 14. Para evitar las quemaduras, no retire la tapa durante la preparación.

416 TISINO

MANUAL DE INSTRUCCIONES



DCC-3500

Cafetera programable de 14 tazas PerfecTemp®